

## FOR ALL MODELS PRESSURE SWITCH

2190 Dagenais Blvd. West Tel. : 514.337.4415  
 Laval (Quebec) Fax : 514.337.4029  
 Canada info@burcam.com  
 H7L 5X9 see us at [www.burcam.com](http://www.burcam.com)

This product has been carefully packaged at the factory to prevent damage during shipping. However, occasional damage may occur due to rough handling. **Carefully inspect your pump** for damages that could cause failures. Report any damage to your carrier or your point of purchase.

We recommend that a licensed electrician be employed to do wiring to the pressure switch. Permanently ground the motor in accordance to the electrical codes for your area.

Please read these instructions carefully. **Failure** to comply to instructions and **designed** operation of this system, may **void** the warranty.

### TO AVOID RISK OF ELECTRICAL SHOCK, REMOVE POWER CORD FROM THE ELECTRICAL OUTLET.


1. Remove power cord from the power supply.
2. Open nearest tap and drain the water tank.
3. Remove water tubing and unscrew switch from motor, or unscrew switch from tank T.
4. Install the replacement switch same as previous one.
5. Connect all wires as the following diagram.

Do not use an extension cord to connect your pump to the power source. From your distribution panel to the pressure switch, we recommend a wire gauge not smaller than 14 gauge.

Pressure switch setting (start/stop 20/40 or 30/50) has been made at the factory. Adjustments may be done to give other operating pressures.

Adjustment or modification of start/stop setting of pressure switch have to be done carefully. **Turn adjustment nut half turn at a time.**

Turn nut 1 clockwise to raise start and stop pressure setting. **Never turn nut 2. This will change the 20 PSI range between start and stop pressure and may damage your tank's bladder or modify the efficiency of your water system.** Check system operation after each adjustment.

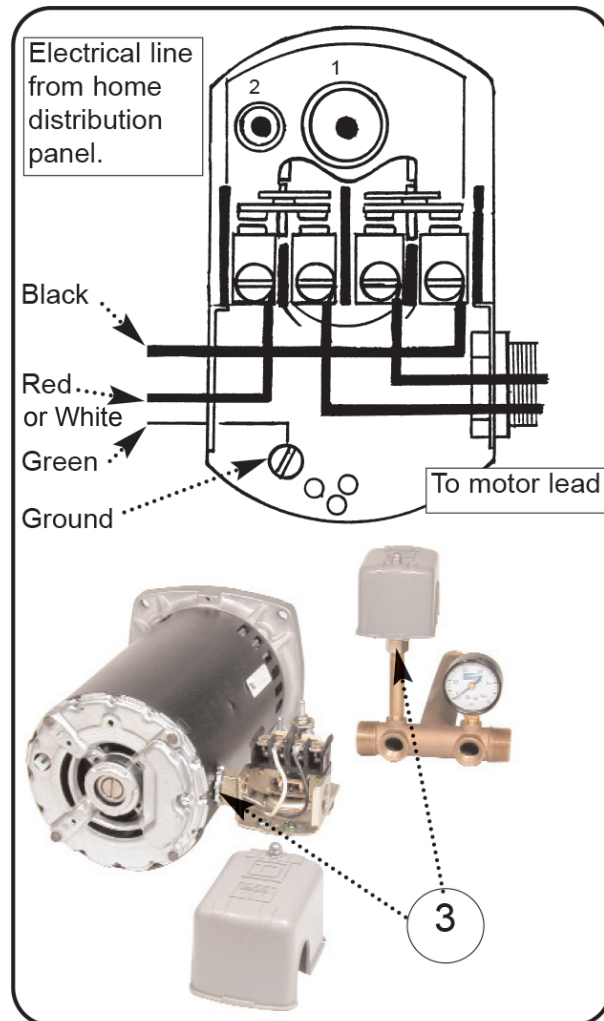

#### OTHER BURCAM PRODUCT PRESSURE SWITCHES

20/40	30/50	40/60	80/100		L.O.P.
150159S	150147S			FSG-2	1/4" B
750775S	750932S			FSG-14	1/4" F
750776S	750933S	750820A		FSG-9	1/8" B
750777S	750934S			FSG-10TU	1/8" B
750953S				FSG-6	3/16"
750957S				FSG-8	1/4" FI
750940S				GHG-2	1/4" FI
750941S					